


HƯỚNG DẪN SỬ DỤNG HBS785 SERVO DRIVER

1. SƠ ĐỒ ĐẦU NỐI:

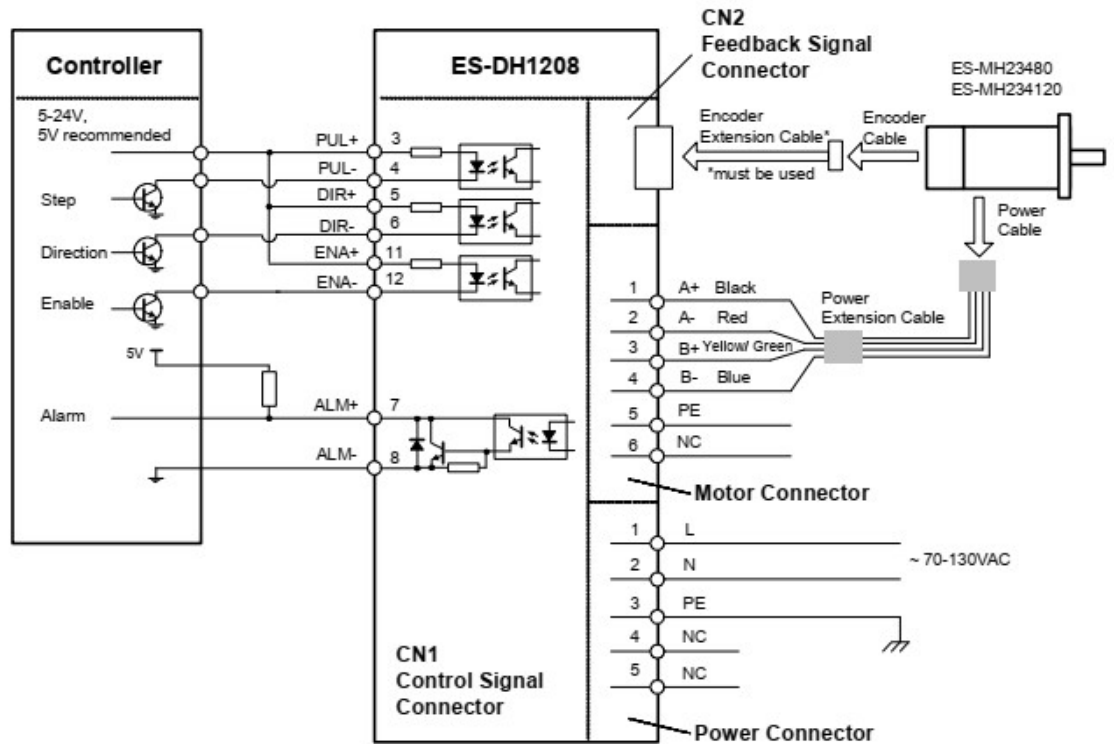

2. MỘT SỐ THÔNG SỐ CẦN CÀI ĐẶT:

"PA__16"	Alarm Level	1	0 or 1	0----High impedance between ALM+ and ALM- at drive error 1----Low impedance between ALM+ and ALM- at drive error
"PA__17"	Pulse Mode	0	0 or 1	0----Pulse + Direction 1----Pulse + Pulse (CW/CCW)
"PA__18"	Pulse Edge	0	0 or 1	0----Active Rising Edge 1----Active Falling Edge
"PA__19"	Motor Direction	1	0 or 1	0 and 1 represents two different directions.
"PA__22"	Speed	60 RPM	1-3000	Speed of the built-in motion generator. Unit RPM

3. MỘT SỐ LỖI CÓ TRÊN DRIVER:

Error code:
 0001----Over-current protection activated
 0002----Over-voltage protection activated
 0003----Brake protection activated
 0004----Position error exceeds the limit